## WET & DRY VACUUM

# **OWNERS MANUAL**

IMPORTANT: READ OWNERS MANUAL CAREFULLY Please fill out & return your warranty card!




MODEL # TP09WD

## TABLE OF CONTENTS

Safety Precautions	3
Machine Operation	4
Machine Maintenance & Storage	4
Parts List	<i>58</i>
Wiring Diagram	9

### **SAFETY PRECAUTIONS**

!!! This machine must be grounded! Grounding provides a path of least resistance for electrical current. To reduce the risk of electrical shock should the machine malfunction, the machine has a special grounding plug. Do not remove the ground pin under any circumstances!

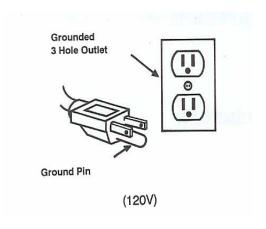

This machine is intended for Commercial use. It is constructed for use in an indoor environment and is not intended for any other use. Use only recommended accessories.

All operators shall read, understand and exercise the following safety precautions:

#### 1] Do not operate machine:

- Unless trained and authorized.
- Unless you have read and understand operators manual.
- In flammable or explosive areas.
- With a damaged cord or plug.
- If not in proper operating condition.
- In outdoor areas.
- In standing water.
- Without bag / filters in place.
- With the use of extension cords.

#### 2] Before operating machine:

 Make sure all safety devices are in place and operate properly.

#### 3] When using machine:

- Do not run machine over cord.
- Do not pull machine by cord or plug.
- Do not pull cord around sharp edges or corners.
- Do not unplug by pulling on the cord.
- Do not stretch cord.
- Do not handle plug with wet hands.
- Keep cord away from heated surfaces.
- Do not pick up burning or smoking debris such as cigarettes, matches or hot ashes.
- Report machine damage or faulty operation immediately.

#### 4] Before leaving or servicing machine:

- Turn off machine.
- Unplug cord from outlet.

#### 5] When servicing machine:

- Unplug cord from outlet.
- Use manufacturer supplied or approved replacements parts.

To avoid electrical shock, please replace the power cord immediately if any damage is being detected, The replacement must be performed only by an authorized person or by an authorized Viper distributor.

## **OPERATING YOUR MACHINE**

## **Dry Operation**

The use of a cloth filter bag and a dust bag will improve levels of filtration and is recommended. Always ensure that the container is emptied of any liquid before using for dry pick-up and that the cloth filter is in a clean and dry condition.

Empty the tank when you notice that the performance is reducing. Switch off the machine and remove the power head. Shake the filter in order to remove debris. This should be done while the hose is still connected to avoid dust exiting from the open dirt container connection. After shaking the filter, wait a few moments for the dust to settle. Remove filter from machine and empty container. If the filter's surface appears to be heavily soiled, it is advisable to brush the filter material clean with an ordinary soft household brush. This ensures continued peak performance. Having emptied container, replace filter and power head. You are now ready to start again.

## **Wet Operation**

The float valve assembly must be used at all times for wet pick-up. Always ensure that the container is emptied of any dry dust before using the machine for wet pick-up.

Always be sure to use a wet pick-up nozzle with rubber blades.

During wet pick-up operation the floor is left almost entirely dry.

When there is no longer liquid to be collected or the machine is full, switch off the power head. Remove the power head and float valve assembly.

Empty the liquid from the container. Replace the float valve assembly and power head.

You are now ready to start work.


## **MAINTENANCE**

**Attention!!!** Before performing any cleaning and maintenance on the vacuum cleaner, always disconnect the plug from the source of electricity.

Make sure that the cable is not cut or damaged. (If it is, contact the nearest authorized service center for replacement)

Thoroughly clean the tank, do not let it sit for a long time with dust or dirty water.


The cloth dust bag can be washed and must be completely dry before use. The motor is built for maintenance-free operation and does not need any particular service. The carbon brushes may need to be replaced due to normal wear and tear caused by using the vacuum cleaner over time, and they can be replaced only by an authorized Viper distributor.

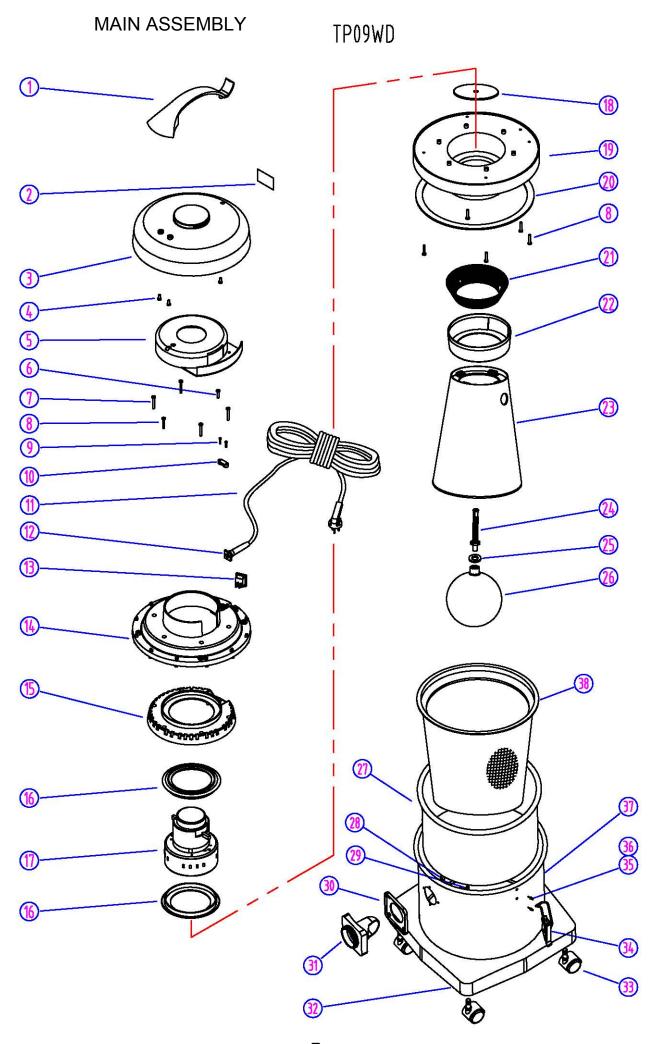


## PARTS LIST FOR TPO9WD

DIA NO	PART NO	DESCRIPTION	NO REQ'D
1	GT10004	HANDLE	1
2	FC40213TP	SERIAL TAG	1
3	GT10003B	COVER, VAC HEAD	1
4	GT13001	ST5 x 12, PH	3
5	GT10019	UPPER COVER, MOTOR	1
6	GT13004	ST5 x 20, PH	1
7	GT13034	ST5 x 50, PH	4
8	VF14125	ST5 x 44, PH	6
9	VA13470	ST3 x 16, PH	2
10	VA21518	CLAMP, BLOCK	1
11	VA65001	CABLE, POWER	1
12	VA21521	GROMMET,POWER CORD	1
13	VA91346	ON/OFF SWITCH	1
14	GV15002	MOUNTING COVER, MOTOR	1
15	FC25002A	MOUNTING PLATE, MOTOR	1
16	VA41032	GASKET, MOTOR	2
17	ZD49000A	VAC MOTOR, 115V	1
18	GV25002	SEAL PLATE	1
19	GV15004A	MOUNTING BASE, MOTOR	1
20	GV15006	GASKET, MOUNTING PLATE	1
21	GV25010	FILTER SCREEN	1
22	GV25013	WATER GUARD	1
23	GV25006	TRUMPET	1
24	GV25003A	POLE, BALL	1
25	GV25007	"O" RING	1
26	GV25009	BALL	1
27	GV15011	VAC CLOTH	1
28	VA13483	WASHER, PLAIN	4
29	GT13028	SCREW, ST, M4 X 13	4
30	GV15010	GASKET, INTAKE	1
31	VA21513	INTAKE	1
32	GV15009TP	MOUNTING BASE, TANK	1
33	VA60303	CASTER	4
34	VA93468	CATCH	2
35	VA13482	WASHER, PLAIN, M5	4
36	VA13462	RIVET, M4.8 X 16	4
37	GV35001A	TANK, 35L	1
38	GV25014	BUBBLE BUSTER	1
39	GV25013	FILTER	1
40	GV25010	COVER, FILTER	1
41	VV20509	SCREW, PH, M5 X 10	1
42	VA65002	POWER CORD	1

## FOR TP09WD

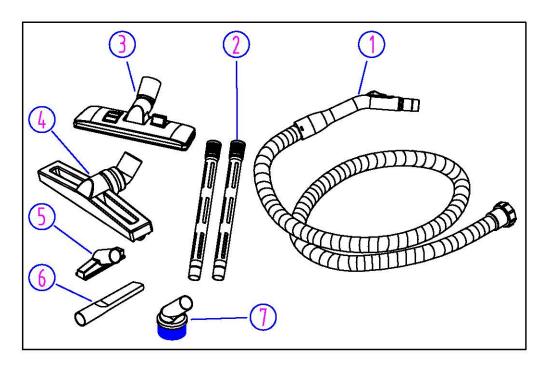

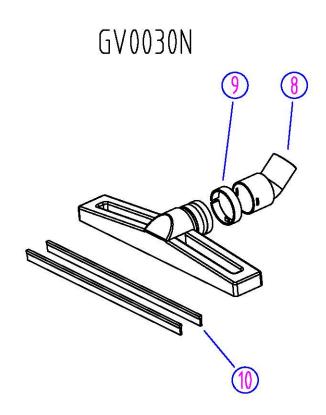

## **ACCESSORIES**

DIA NO	PART NO	DESCRIPTION	NO REO'D
1	VA61600	HOSE, VACUUM ASSY	1
2	VA20248	TUBE, SST	2
3	VA61500	COMBINATION TOOL	1
4	GV0030N	WET PICK-UP TOOL	1
5	VA20807	UPHOLSTERY TOOL	1
6	VA20809	CREVICE TOOL	1
7	VA20808	DUSTING TOOL	1
8	VA20207-2	ADAPTOR	1
9	VA20207-3	CLAMP, ADAPTOR	1
10	VA20208-8	SQUEEGEE BLADE	2

# Wiring Diagram TP09WD

